


Lined Reusable Grocery Bags

Pieces required:

- A: 18" x 36" outer fabric
- B: 18" x 36" lining fabric
- C: 18" x 4" handle fabric

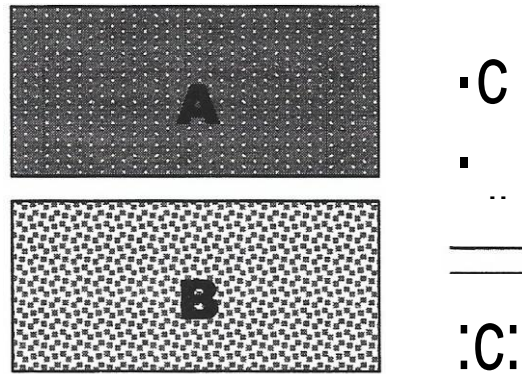

Instructions:

1. Fold long sides of each handle piece to the center, then fold in half lengthwise. Topstitch along long edges.
2. Pin the handles to the right side of the outer fabric, one on each short side. Pin the lining fabric on top of the outer fabric, right side down with handles between the layers. Stitch along each short side.
3. Separate outer and lining layers and pin right sides together with the seams lined up. Sew along each long side, leaving a space open for turning.
4. Turn project right side out and stitch shut the opening for turning. Topstitch along the upper edge of the bag, making sure to stitch over the handles several times to strengthen them.

